


# Customer Leap Audit Instructions

Equipment needed:	BT030 Ekip Connect Software
Additional information needed:	Attached file LEAP audit customer 1.xlsx
Notes:	If you do not have a BT030 (Bluetooth device) you can order the BT030 part number 1SDA058259R1 <b>Order from you local distributor or by contacting your local ABB/TnB Sales Representative.</b>

## How to export LEAP File from Ekip 2.0

1. Home page click on File in upper left hand corner.

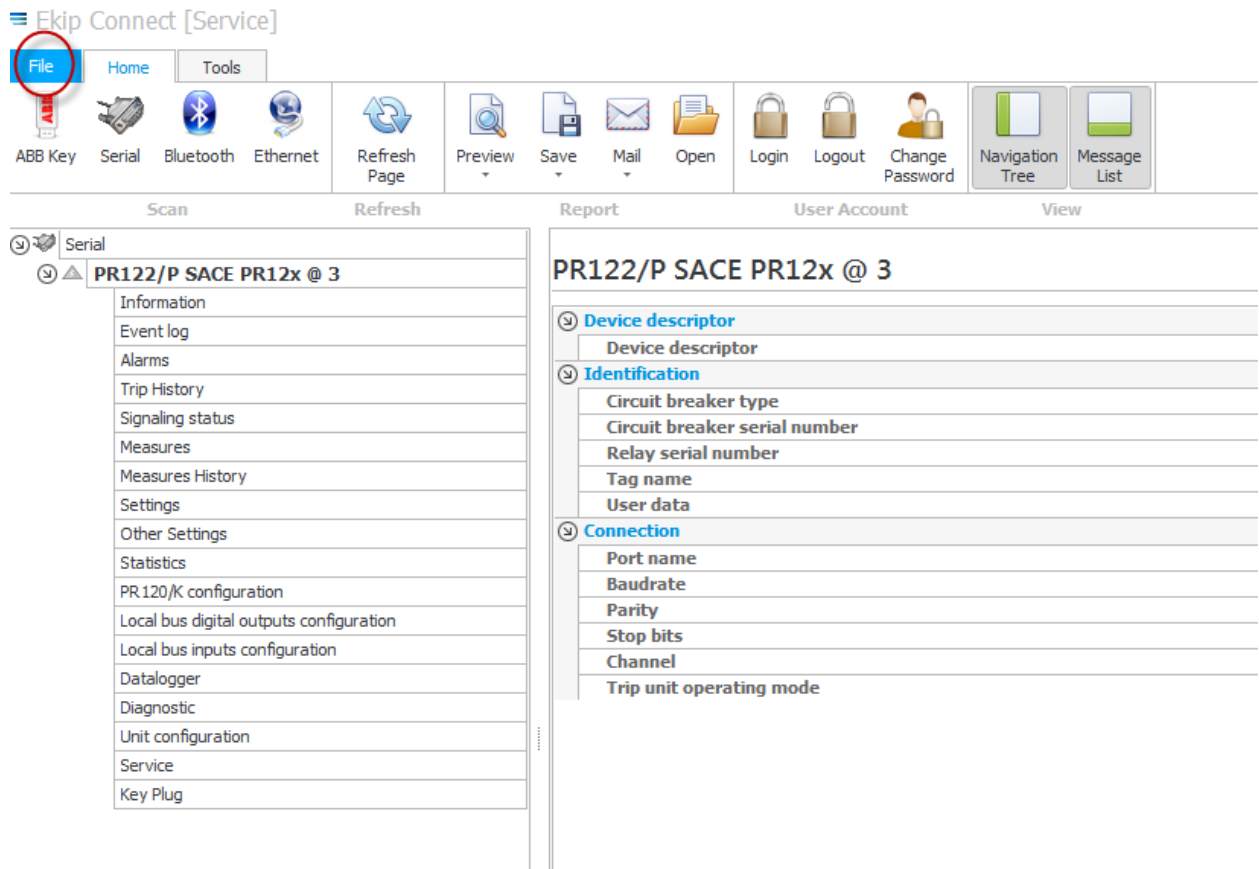

Ekip Connect [Service]

File Home Tools

ABB Key Serial Bluetooth Ethernet Refresh Page Preview Save Mail Open Login Logout Change Password Navigation Tree Message List

Serial

PR122/P SACE PR12x @ 3

- Information
- Event log
- Alarms
- Trip History
- Signaling status
- Measures
- Measures History
- Settings
- Other Settings
- Statistics
- PR120/K configuration
- Local bus digital outputs configuration
- Local bus inputs configuration
- Datalogger
- Diagnostic
- Unit configuration
- Service
- Key Plug

PR122/P SACE PR12x @ 3

- Device descriptor
  - Device descriptor
- Identification
  - Circuit breaker type
  - Circuit breaker serial number
  - Relay serial number
  - Tag name
  - User data
- Connection
  - Port name
  - Baudrate
  - Parity
  - Stop bits
  - Channel
  - Trip unit operating mode

## 2. Click on Save

Ekip Connect [Service]


The screenshot shows the Ekip Connect software interface. On the left, there is a dark sidebar with a menu. The 'Save' option is highlighted with a red circle and a blue arrow pointing to the right. The main area is titled 'Ekip Connect' and contains three sections: 'Save Settings File', 'Save Service File', and 'Save Leap File'. On the right side, there are two dropdown menus labeled 'Device' and 'Page'. The 'Device' dropdown is set to 'PR.122/P SACE PR.12x @ 3' and the 'Page' dropdown is set to 'All settings pages'.

## 3. Click on Leap Icon


Ekip Connect [Service]

The screenshot shows the Ekip Connect software interface. The 'Save' option in the left sidebar is no longer highlighted. In the main area, the 'Leap' icon, which is a small black icon of a train, is highlighted with a red circle. The rest of the interface, including the 'Save Settings File', 'Save Service File', and 'Save Leap File' sections, and the 'Device' and 'Page' dropdown menus, remains the same as in the previous screenshot.

4. A window will pop up click on “...”

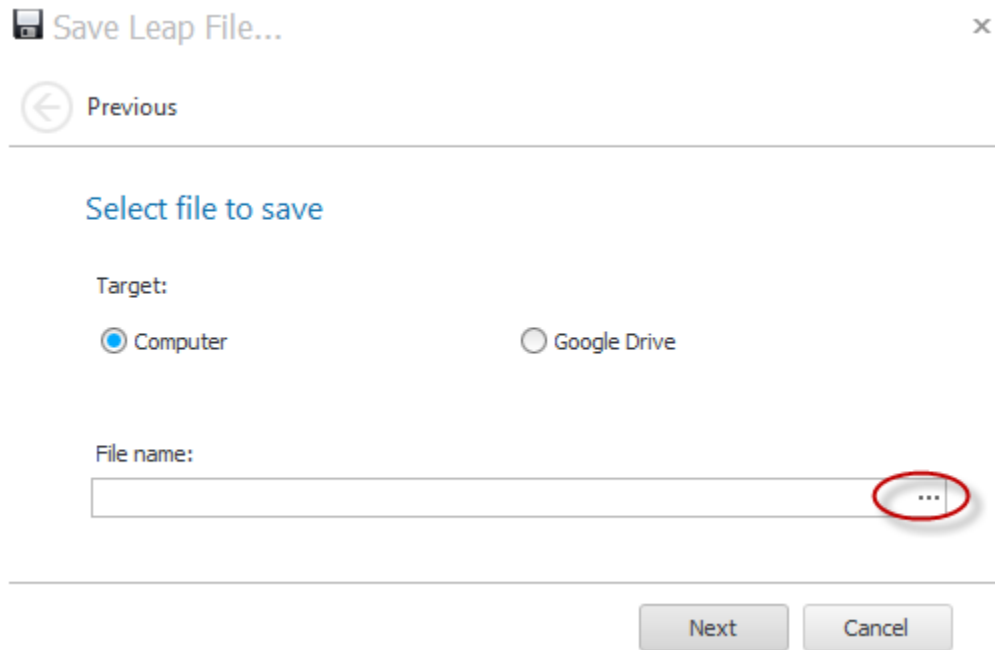

5. A Save As window will pop up, keep the name the same and save the file to wherever is convenient for you. Then click save

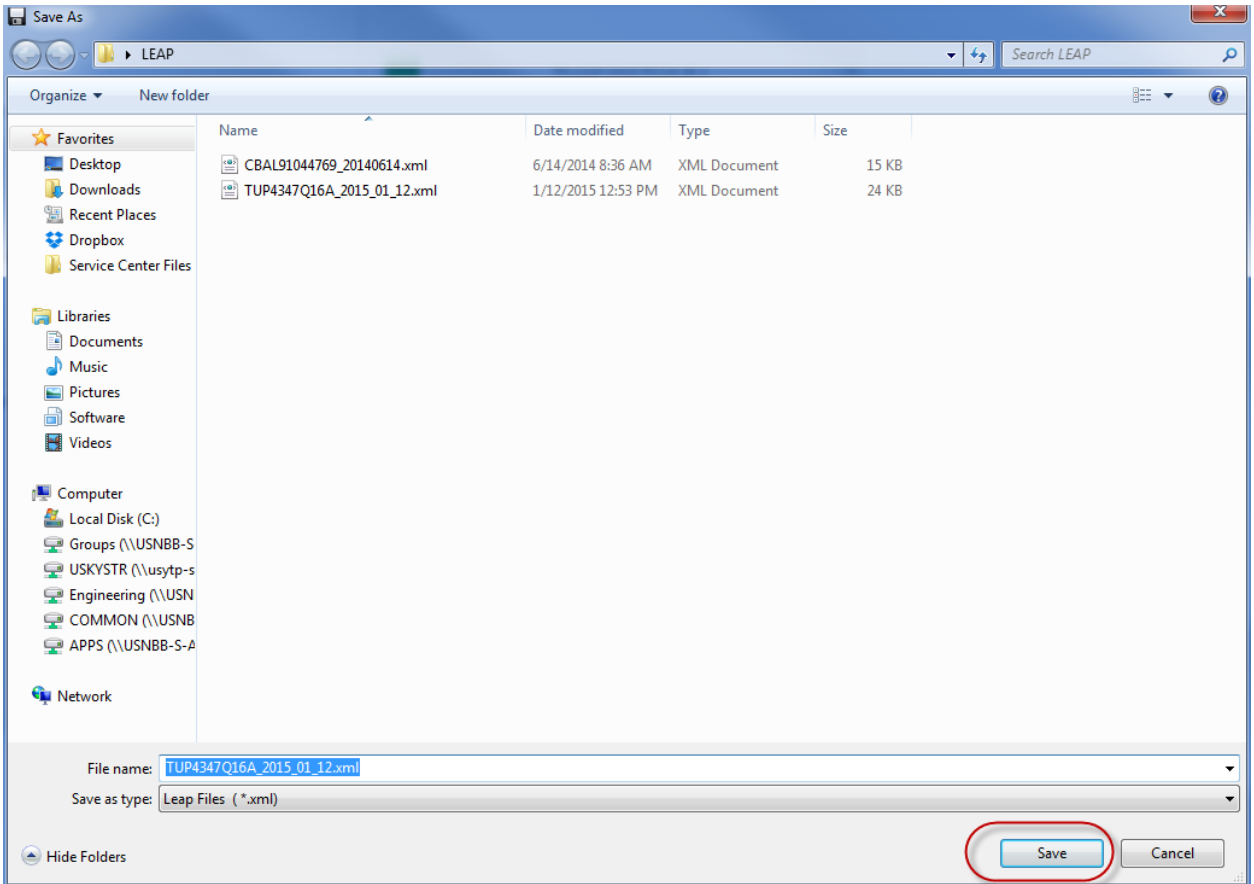

6. Click Finish then the file has been saved.



Saving file...

Save file succesfully completed.  
Click Finish button to exit.



## Additional Instructions

7. Send .xml file along with completed Leap audit customer 1.xlsx, to [LVPrep-1@us.abb.com](mailto:LVPrep-1@us.abb.com) with PO for 150.00 each Leap audit, under part number BSLEAP
8. Once all information has been received a Leap Audit report will be sent back to the customer.